



## Florprufe™ 120

### Integrally bonded vapour protection for slabs on grade

#### Description

Florprufe™ 120 is a high performance vapour barrier with Grace's Advanced Bond Technology™ that forms a unique seal to the underside of concrete floor slabs.

Comprising a highly durable polyolefin sheet and a specially developed, non-tacky adhesive coating, Florprufe 120 seals to liquid concrete to provide integrally bonded vapour protection.

#### Advantages

- Forms a powerful integral seal to the underside of concrete slabs
- Protects valuable floor finishes such as wood, tiles, carpet and resilient flooring from damage by vapour transmission
- Direct contact with the slab complies with the latest industry recommendations
- Remains sealed to the slab even in cases of ground settlement
- Ultra low vapour permeability
- Durable, chemical resistant polyolefin sheet
- Lightweight, easy to apply, kick out rolls
- Simple lap forming with mechanical fixings or tape

#### Installation

Florprufe 120 is engineered for use below slabs on grade with moisture-impermeable or moisture-sensitive floor finishes that require the highest level of vapour protection.

Florprufe complies with the latest recommendations of ACI Committees 302 and 360, i.e. for slabs with vapour sensitive coverings, the location of the vapour barrier should always be in direct contact with the slab<sup>1</sup>.

The membrane is loose laid onto the prepared sub-base, forming overlaps that can be either mechanically secured or taped. The unique bond of

Florprufe to concrete provides continuity of vapour protection at laps. Alternatively, if a taped system is preferred, self-adhered Preprufe® Tape can be used to overband the laps.


Slab reinforcement and concrete can be placed immediately. Once the concrete is poured, an integral bond develops between the concrete and membrane.

#### Health & Safety

Refer to relevant Material Safety Data Sheet. Complete rolls should be handled by 2 persons.

Florprufe 120 can be applied at temperatures of -4°C or above. Membrane installation is unaffected by wet weather. Installation and detailing of Florprufe 120 are generally in accordance with ASTM E 1643-98.

#### Typical Perimeter Detail

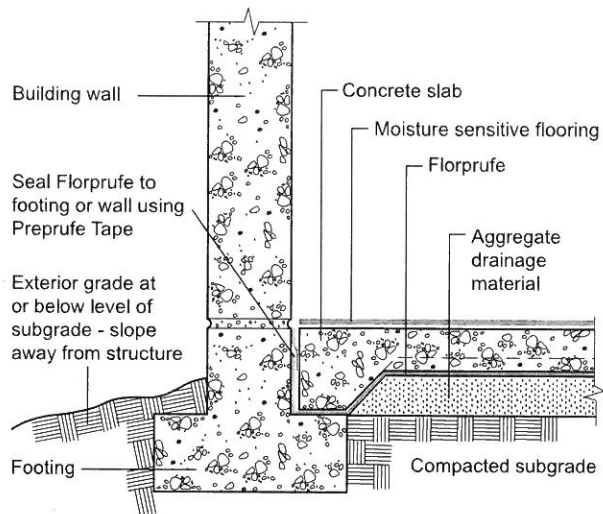

<sup>1</sup> ACI 302. 1R 96 Addendum

## Supply

### Florprufe 120

Supplied in rolls	1.2 m x 35 m
Roll area	42 m <sup>2</sup>
Roll weight	37 kg approx.

### Ancillary Products

Preprufe Tape is packaged in cartons containing 4 rolls that are 100 mm x 15 m.

Grace Liquid Membrane is supplied in 5.7 L pails.

## Physical Properties



Property	Typical Values	Test Method
Colour	White	
Thicken (nominal)	0.5 mm	ASTM D 3767 Method A
Water Vapour Permeance	0.03 perms	ASTM E 96 Method B
Tensile Strength	65 lbs/in.	ASTM E 154
Elongation	300%	ASTM D 412
Puncture Resistance	3300 gms	ASTM D17091
Peel Adhesion to Concrete	>4 lbs/in.	ASTM D 903

\*Test methods that comprise ASTM E1745 standard for vapour retarders.

Prepare substrate in accordance with ACI 302.1R Section 4.1. Install Florprufe 120 over the leveled and compacted base. Place the membrane with the adhesive coated side facing towards the concrete slab. Remove and discard release liner. End laps should be staggered to avoid a build up of layers. Succeeding sheets should be accurately positioned to overlap the previous sheet 50 mm along the marked lap line.

## Laps

- Mechanical fastening method** – To prevent the membrane from moving and gaps opening, the laps should be fastened together at 1.0 m maximum centres. Fix through the centre of the lap area using 12 mm long washer-head, self-tapping, galvanized screws (or similar) and allowing the head of the screw to bed into the adhesive compound to self-seal. It is not necessary to fix the membrane to the substrate, only to itself. Ensure the membrane lays flat and no openings occur. (See Figure 1.) Additional fastening may be required at corners, details, etc. Continuity is achieved once the slab is poured and the bond to concrete develops.

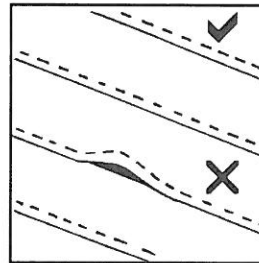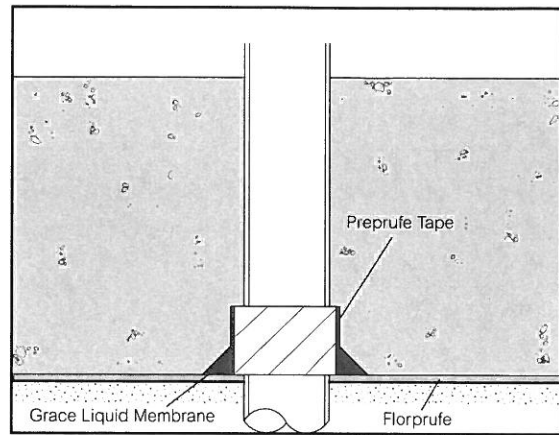

OR

- Taped lap method** – For additional security use Grace Preprufe Tape to secure and seal the overlaps. Overband the lap with the 100 mm wide Preprufe Tape, using the lap line for alignment. Remove plastic release liner to ensure bond to concrete.

## Penetrations

Mix and apply Grace Liquid Membrane liquid detailing compound to seal around penetrations such as drainage pipes, etc. (See Figure 2 and refer to the Grace Liquid Membrane data sheet.)

## Concrete Placement

Place concrete within 30 days. Inspect membrane and repair any damage with patches of Preprufe Tape. Ensure all liner is removed from membrane and tape before concreting.

[www.graceconstruction.com](http://www.graceconstruction.com)

Australia 1800 855 525 New Zealand (64-9) 448 1146 China Mainland (86-21) 5467 4678  
 Hong Kong (852) 2675 7898 Indonesia (62-21) 893 4260 Japan (81-3) 3537 6366 Korea (82-32) 820 0800  
 Malaysia (60-3) 9074 6133 Philippines (63-49) 549 7373 Singapore (65) 6265 3033 Taiwan (886-3) 427 0850  
 Thailand (66-2) 709 4470 Vietnam (84-8) 3710 6168

Bituthene and Servipak are the registered trademarks of W. R. Grace & Co.-Conn.

The information given is based on data and knowledge considered to be true and accurate and is offered for the user's consideration, investigation and verification. Since the conditions of use are beyond our control we do not warrant the results to be obtained. Please read all statements, recommendations or suggestions in conjunction with our conditions of sale including those limiting warranties and remedies which apply to all goods supplied by us. No statement, recommendation or suggestion is intended for any use which would violate or infringe statutory obligations or any rights belonging to a third party.

These products may be covered by patents or patents pending. Copyright 2014. W. R. Grace (S) Pte Ltd 110-FLP-38A  
 Printed in Singapore 02/14

**GRACE**